


Movopart M50

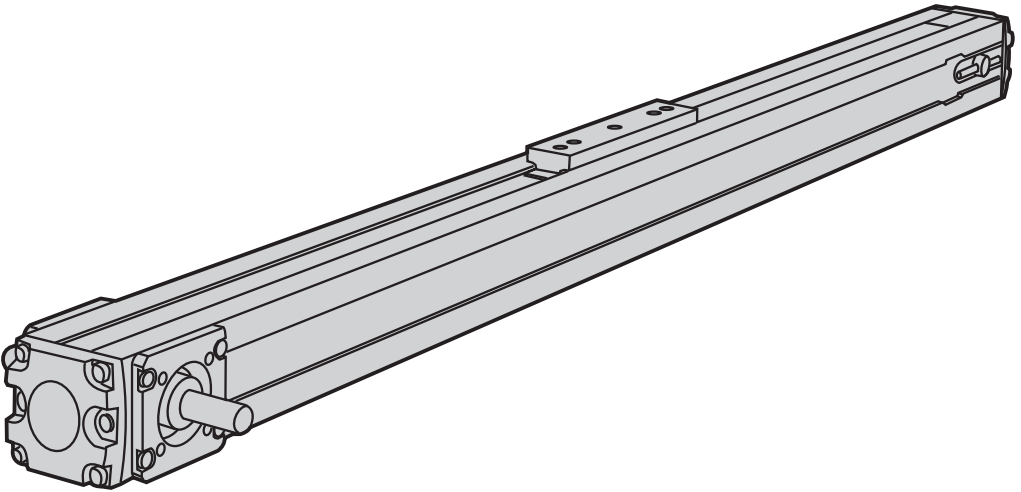

 
 
 
Installation and Service Manual
Edition: 2
DW110242gb-0446

 THOMSON™



Linear Motion. Optimized.

1. Installation


1.1 Mounting of the unit




1.2 Maximum distance between mounting points

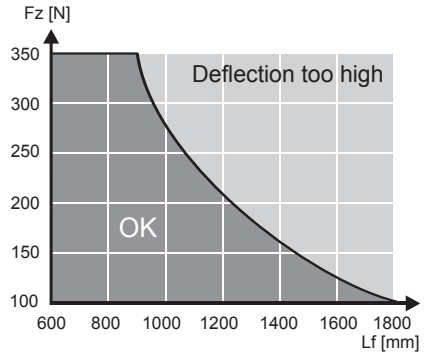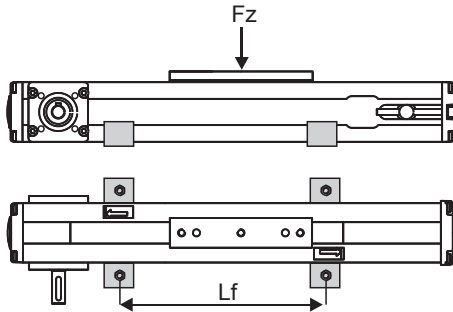

1.3 Maximum stroke

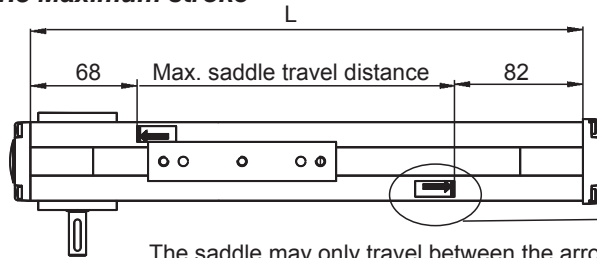


Max. stroke = $L - 270$

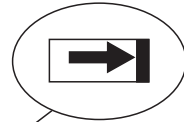


The saddle may only travel between the arrowmarks!

1.4 Saddle mounting holes

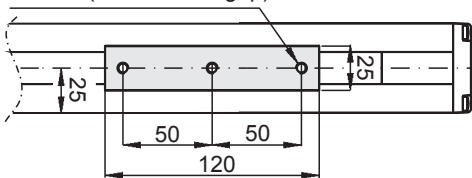


1.5 Motor support

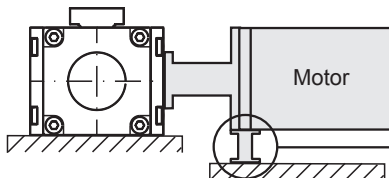


Always support the motor!

1. Installation

1.6 Motor flange

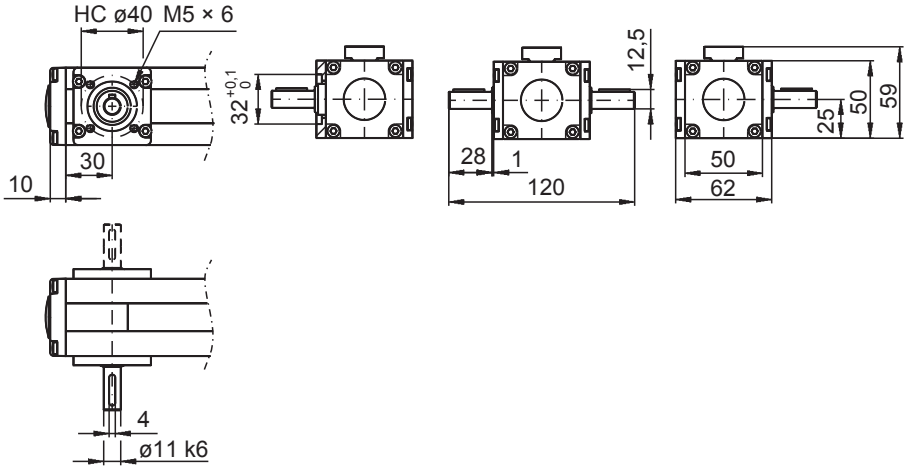

 1.7 Location of magnet for magnet sensors



Magnets are fitted on both sides of the saddle. Remember to fit any sensors before fitting the mounting clamps to the unit.

1.8 End of stroke limit switches




Limit switches should be used at both ends of stroke to avoid the saddle running in to the belt wheels. The distance between the switches and the ends of the unit depends on the deceleration rate of the drive system.

2. Service and maintenance

2.1 Lubrication

No lubrication is needed as the unit is lubricated for life.

2.2 Adjustment of the belt tension

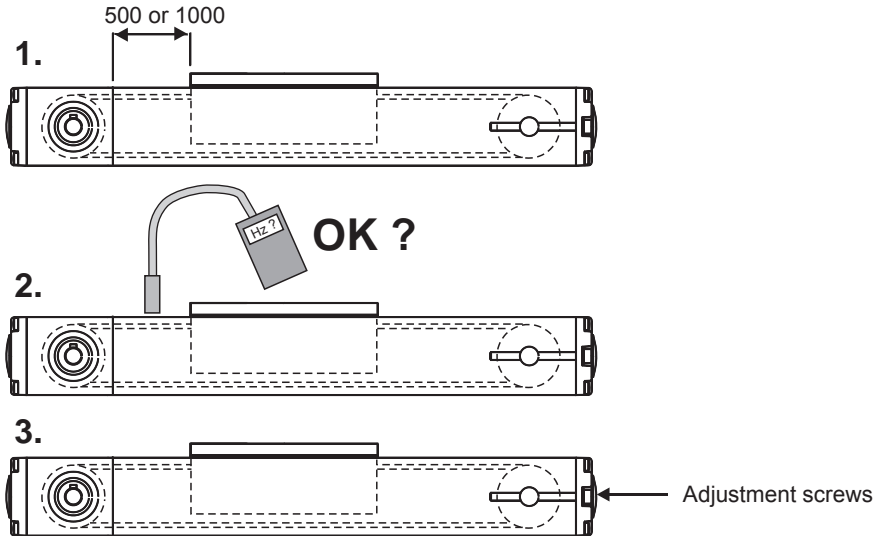

The belt must be set to the correct tension after a belt replacement.

1. Place the saddle at 500 or 1000 mm from the drive station.
2. Measure the belt frequency with a frequency meter according to the instructions for the frequency meter in question. The correct frequency is 68,6 Hz for 500 mm and 34,3 Hz for 1000 mm.
3. Adjust the adjustment screws if the frequency is not correct. Check the belt position when the correct tension is set.

2.3 Adjustment of the belt position




The belt should normally run in the centre or from side to side of the belt wheels. But if the belt runs against one side only the belt position needs to be adjusted to avoid increased belt wear. The belt tension should be correctly set before any belt position adjustment.

1. Remove the plastic cover in the cover plate in the tension end and check the belt position while the unit is running.
2. If adjustment is needed, tighten the tension screw a little bit on the side that the belt runs against.
3. Check the belt position again.
4. If the belt still runs on one side only, repeat from point 2.

2. Service and maintenance


2.4 Replacement of the belt

1.

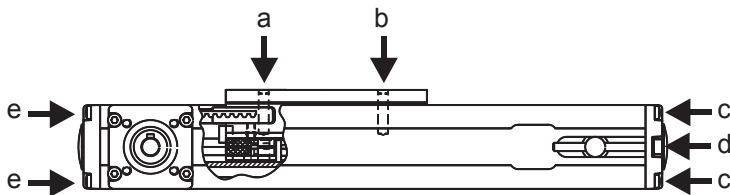


First remove the belt holder pins in the saddle (a and b). The pins are removed by screwing a M4 screw into them and then pull them up. Then remove the tension station screws (c) and loosen the belt tension adjustment screws (d) as much as possible. At last remove the drive end cover plate screws (e) so that it can be removed.

2.

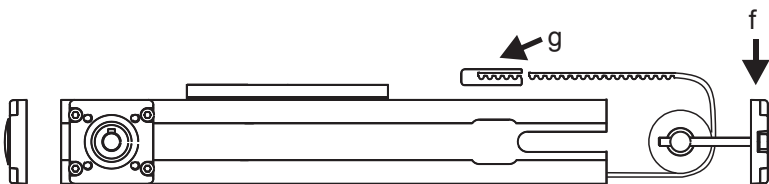


Pull out the tension station (f) and the belt so that the belt holder (g) can be removed from the old belt.

3.

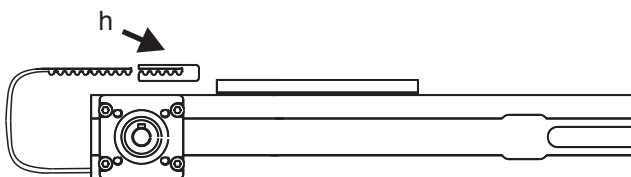

Pull out the old belt from the drive end and remove the belt holder (h).

4.

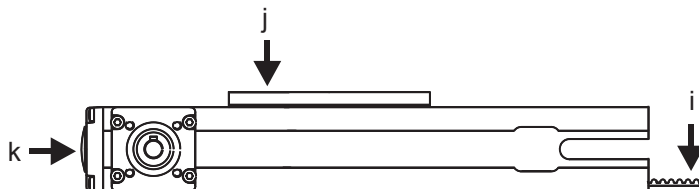


Insert the new belt (i) and put it around the drive wheel. Place the belt holder on the belt and then insert the holder in to the saddle. Fix the belt to the saddle using the belt holder pin (j). Put back the drive station cover plate (k).

2. Service and maintenance


2.4 Replacement of the belt

5.

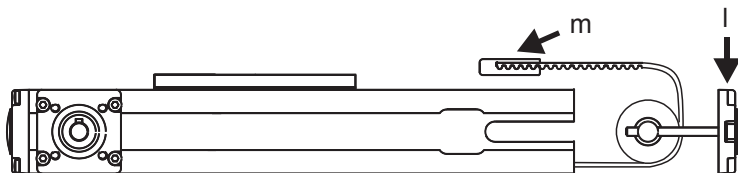

Put the new belt around the tension station wheel (l) and then put the belt holder on the belt end (m).

6.

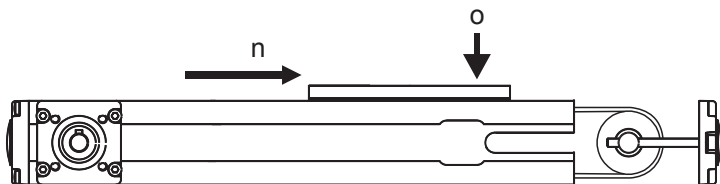

Push the saddle to the other side of the unit (n) and fix the belt holder to the saddle again using the belt holder pin (o).

7.




Attach the tension station to the profile again (p) and set the correct belt tension by adjusting the belt tension adjustment screws (r). See instruction 2.2. Finally check the belt position, see instruction 2.3.

3. Technical data

3.1 Technical data table

	M50
Max. speed [m/s]	5
Max. input speed [rpm]	2300
Temperature range [°C]	-20 – +70
Weight (L in meters) [kg]	$0,71 + L \times 2,5$
Saddle weight [kg]	0,33
Max. load Fx [N]	400
Max. load Fy [N]	350
Max. load Fz [N]	350
Move [mm/rev.]	130
Repeatability [±mm]	0,2
Resolution [mm]	1,5

3.2 Definition of forces

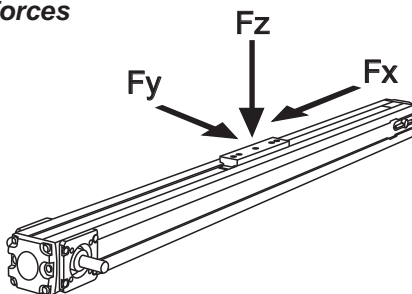

EUROPE**United Kingdom**

Thomson
Office 9, The Barns
Caddsdown Business Park
Bideford
Devon, EX39 3BT
Phone: +44 (0) 1271 334 500
E-mail: sales.uk@thomsonlinear.com

Germany

Thomson
Nürtinger Straße 70
72649 Wolfschlugen
Phone: +49 (0) 7022 504 0
Fax: +49 (0) 7022 504 405
E-mail: sales.germany@thomsonlinear.com

France

Thomson
Phone: +33 (0) 243 50 03 30
Fax: +33 (0) 243 50 03 39
E-mail: sales.france@thomsonlinear.com

Italy

Thomson
Largo Brughetti
20030 Bovisio Masciago
Phone: +39 0362 594280
Fax: +39 0362 594263
E-mail: info@thomsonlinear.it

Spain

Thomson
E-mail: sales.esm@thomsonlinear.com

Sweden

Thomson
Estridsväg 10
29109 Kristianstad
Phone: +46 (0) 44 24 87 00
Fax: +46 (0) 44 24 40 85
E-mail: sales.scandinavia@thomsonlinear.com

SOUTH AMERICA**Brazil**

Thomson
Av. Tamboré, 1077
Barueri, SP – 06460-000
Phone: +55 (11) 3616-0191
Fax: +55 (11) 3611-1982
E-mail: sales.brasil@thomsonlinear.com

USA, CANADA and MEXICO

Thomson
203A West Rock Road
Radford, VA 24141, USA
Phone: 1-540-633-3549
Fax: 1-540-633-0294
E-mail: thomson@thomsonlinear.com
Literature: literature.thomsonlinear.com

ASIA**Asia Pacific**

Thomson
E-mail: sales.apac@thomsonlinear.com

China

Thomson
Rm 2205, Scitech Tower
22 Jianguomen Wai Street
Beijing 100004
Phone: +86 400 6661 802
Fax: +86 10 6515 0263
E-mail: sales.china@thomsonlinear.com

India

Thomson
c/o Fluke Technologies Pvt. Ltd.
#424, Deodhar Center,
Marol Maroshi Road,
Andheri – E, Mumbai – 400059 India
Phone: +91 22 29207641
E-mail: sales.india@thomsonlinear.com

Japan

Thomson
Minami-Kaneden 2-12-23, Suita
Osaka 564-0044 Japan
Phone: +81-6-6386-8001
Fax: +81-6-6386-5022
E-mail: csjapan@scgap.com

Korea

Thomson
F7 Ilsong Bldg, 157-37
Samsung-dong, Kangnam-gu,
Seoul, Korea (135-090)
Phone: +82 2 6917 5049
Fax: +82 2 528 1456
E-mail: sales.korea@thomsonlinear.com



Linear Motion. Optimized.

© 2004 Thomson - Printed in Sweden. All rights reserved.